



## Bluetooth Setup for eBeam Edge™ Windows Vista or Windows XP

These instructions will help you set up your Bluetooth-enabled eBeam Edge on a computer with either a Windows Vista or Windows XP operating system.

**Note:** The Bluetooth-enabled eBeam Edge is supported only on Windows XP Service Pack 2 or higher at this time.

To check the Service Pack level you are working with, go to Start > Control Panel > System.

Before you begin, make sure that you have the latest eBeam software installed on your computer.


- Plug your eBeam receiver into a power outlet, and confirm that the light is glowing blue.
- Insert the USB Bluetooth adapter included with your system into an available USB port on your computer.
- Verify that your computer has recognized the adapter. Look for a Bluetooth icon in the system tray of your computer (located near the lower right-hand of the screen).




- If your computer is not recognizing the Bluetooth adapter, call 888-99-EBEAM to further diagnose the issue.
- Right-click on the Bluetooth icon in the system tray, and choose **Add a Bluetooth Device**.
- Check the box next to “My device is set up and ready to be found”, then click **Next**.



- Your computer will detect the Bluetooth device. Highlight it in the dialogue box and click **Next**.

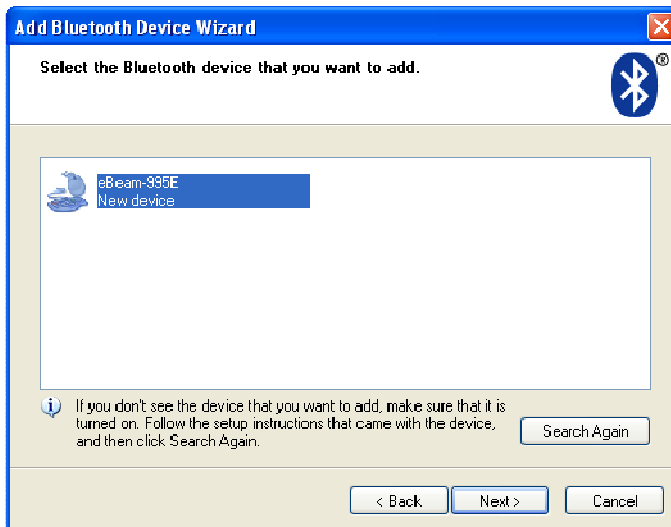

- Note: Your device will be called eBeam-“XXXX,” where “XXXX” is the predetermined number given to your specific eBeam receiver.
- Select the button next to “Use the passkey found in the documentation.” Enter the passkey “1234,” and click **Next**.

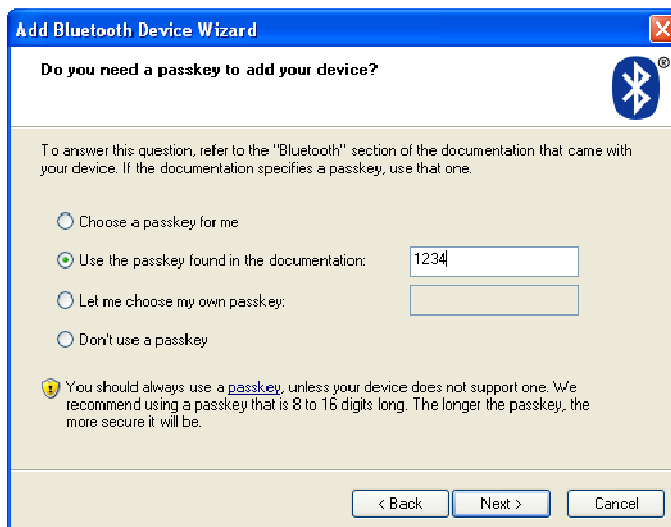

- Note: This passkey will be requested whenever you pair the eBeam receiver with another computer.
- Verify that the glowing blue light on your eBeam receiver flashes four times. This indicates that your computer has made a connection with the receiver.

- A new dialogue box will appear on your computer screen confirming that your Bluetooth device has been added. Click **Finish** to end the setup.